

Songbook

Please Note:

The music contained in this machine is provided at no charge for promotional use only. These songs, along with thousands of additional titles, are in stock and available for purchase in CD+G format. Please call or stop in for more information and pricing.

Have Fun!



Any attempt to record or duplicate the music contained in the JB-199 is violation of US copyright law.

Using the JB-199 Karaoke Jukebox

Setup (all power buttons OFF - all volume levels turned DOWN!)

- 1) Connect RCA cable from either yellow VIDEO OUT jack on Jukebox (top yellow jacks) and VIDEO IN jack on TV (on most TVs this jack is yellow). Be careful NOT to plug into the VIDEO IN jack! Turn TV "ON". Make sure the TV tuner is set to "AUX IN", "VIDEO IN" or "LINE IN". Most TVs will either have an input select button on the front panel, on the remote, or you can try setting the tuner to channel 2 and then hit the channel down arrow once. At this time your screen will be blank.
- 2) Connect the right and left RCA (red and white) AUDIO OUT jacks (there are two sets of jacks, either set is fine) to any available line input on your stereo using an RCA to RCA cable **-OR-** to the XLR (mic style) INPUT on the powered speaker(s) (if rented) using the supplied RCA to XLR cable. NOTE: If you only rented 1 powered speaker use either red (right channel) output jack. Pay attention to any instructional labels found on the back of the units for proper connections and settings!
- 3) Connect the microphones to the player using the 1/4" to XLR cables supplied with the unit. The XLR end snaps into the bottom of each microphone. The 1/4" end plugs into the jacks on the lower left front of the unit. Adjust the volume and echo of the microphones with the volume and echo knobs located just to the right of the mic jacks. Be sure to switch the microphones "ON" using the switch found on the side of each mic. "ON" is the position toward the ball of the mic.
- 4) Turn the Jukebox power ON by pressing the white power button (upper left corner). The display will read "Digital Jukebox Power ON". **NOTE: It usually takes 1-2 minutes for the Jukebox to boot its internal hard drive.** During this time, turn the power ON to your stereo or the powered speaker(s). Make sure the volume is turned all the way down on the powered speaker BEFORE turning it on. (Once the system is on you can adjust the volume to a comfortable level).
- 5) Once the Jukebox has booted up its hard drive, "PRO-MIX Audio & Lighting" and "Select Song Number" should appear on your TV screen. If you do not see anything, go back to step 1 and double check your TV settings and connections! You can call Pro-Mix for technical support during our normal business hours.



Male RCA Plugs



XLR Connectors



1/4" Plug



Operation

- 1) Enter a song number from the song book using the numeric buttons, then push the START button to begin play. The STOP button will stop playback and clear the song.
- 2) You can adjust your mic volume and echo using the adjustment knobs on the front of the unit. Key control and tempo can be adjusted using the KEY and TEMPO buttons located on the front panel just above the mic control knobs.
- 3) If desired, you can program the next song while someone is singing by entering the song number and pressing the PROG button. The song title will appear in the cue at the top of the screen, and will play when the current singer is finished.
- 4) Please do not attempt to use the buttons marked JB/CD, BGU, VOCAL, LIST, or MENU unless instructed by a technician as they may interfere with the proper function of the unit.

WARNINGS (PLEASE READ CAREFULLY)

- 1) DO NOT hold the mic too close to the speaker or you may experience a feedback squeal. This could damage the speaker - REMEMBER: If you break it, you bought it. The powered speakers cost \$800.00 each.
- 2) DO NOT drop the mics or pull on the cable. The mics are fragile! When you get your system, check that the mic screens are not dented - if you bring them back dented you will own a microphone! A microphone costs \$90.00. Always coil the cable neatly - never kink the cable. And please, NEVER swing the mic from the cable!
- 3) DO NOT SCREAM, hit or clap your hands into the mic. This can damage the speakers. Don't forget: If you break 'em.... well, by now you should get the idea!
- 4) BE NICE to the songbooks (and don't forget to return them). Lost or damaged songbooks cost \$20 each! If you need extra standard songbooks, you can print the songlist from our website at www.promixkaraoke.com, or www.pro-mix.com.
- 5) When removing RCA cables - NEVER wiggle them off!!! This will break the jack! Gently twist while pulling straight out from the jack.
- 6) If you choose to use your own TV rather than rent ours, and you cannot get the menu on your screen, you ARE NOT entitled to a refund - don't even ask. Use your own TV at your own risk. Usually our techs can talk you through using your TV if you can't figure it out yourself, but if they can't..... Please don't try to blame us.... We want you to have fun!
- 7) Please remember that the Jukebox is a \$3800.00 piece of equipment. Children should be instructed by an adult as to it's proper use and/or supervised during its use.
- 8) DO NOT attempt to connect the Jukebox to your computer or a network. You cannot access the music files with a normal computer. If you try, you could severely damage the unit. The song files are coded to the drive and registered for use in this machine only. The song files cannot be copied without destroying them.

PLEASE NOTE: Your rental is fully tested *twice* before you receive it – once when it was returned from the previous rental, and once right before you checked it out. It is being given to you in perfect working condition. If you notice any damage, have your salesperson make a notation on your contract prior to leaving otherwise you will be charged if the equipment is damaged or does not function upon return. If you have any questions regarding the operation of the unit, ask them before you leave – although you can always call during business hours for tech support, once we are closed you are on your own...